

INSTRUCTIONS FOR FILTER CHANGE

LG 350 / LG 450


The condition of the air filters must be checked regularly. A message **to check the filters** will be displayed on the control unit every 3 months. The diode in the filter symbol on the bottom left lights up yellow.

Check the filters in your comfort ventilation system and replace them, depending on the degree of pollution! Filters must be replaced immediately if very dirty. Otherwise, they should be replaced at least twice a year, depending on outdoor air pollution levels.


Where are the different filters positioned?

1 Filter cover


2 ODA filter ISO ePM1 70% (outdoor air filter) 


3 ETA filter ISO coarse 80% (extract air filter) 

Left-hand version

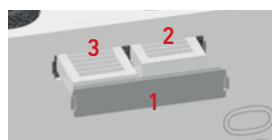

Right-hand version

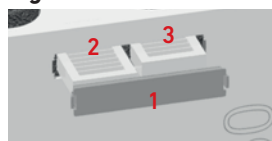

 **Ensure that operation periods of the compact ventilation unit without an air filter are kept as short as possible.**

 


1 Filter check

A message for checking the filters will appear every 3 months.

The LED on the bottom left lights up yellow. Check the filters for pollution and replace them, if necessary.

Our recommendation: Replace the filters at least **twice a year**.



2 Removing the filter cover

Remove the filter cover (position 1) by pressing the latches positioned at the sides towards the inside.



3 Removing the filters

Remove the **extract air filter** and the **outdoor air filter** by the flaps.

4 *Filter change*

Only original replacement filters of the specified filter class may be used.

When replacing the air filters, avoid soiling the ventilation unit and its components.

When you have inserted the new air filters, close the filter cover.

When inserting the new filters, observe the mounting position (direction of air).

! **Dirty air filters must be immediately and suitably disposed of.**
The used air filters can be disposed of as residual waste.



5 *Clearing the filter message*

Reset the filter counter after changing the filters. Press the **[+] button** and the **[-] button** simultaneously for **5 seconds**.

The filter message disappears after entering this combination.



Premature filter change

If the air filters are replaced prematurely, the filter counter must be reset without a pending filter message. To do this, you again **press the [+] button** and the **[-] button** simultaneously for **5 seconds**.

NOTE: These brief instructions do NOT substitute the **Operating Manual** which is available for download on the Internet. We furthermore recommend concluding a **contract for annual servicing** by a specialised and officially licensed company.

ATTENTION: Only authorised specialist staff may perform work on the ventilation unit (except filter replacement)!